


Codes: 600VL3LY.L



600VL3LY.X




600VL3LY.W




LAYLA

4 control thermostatic valve - 3 outlets

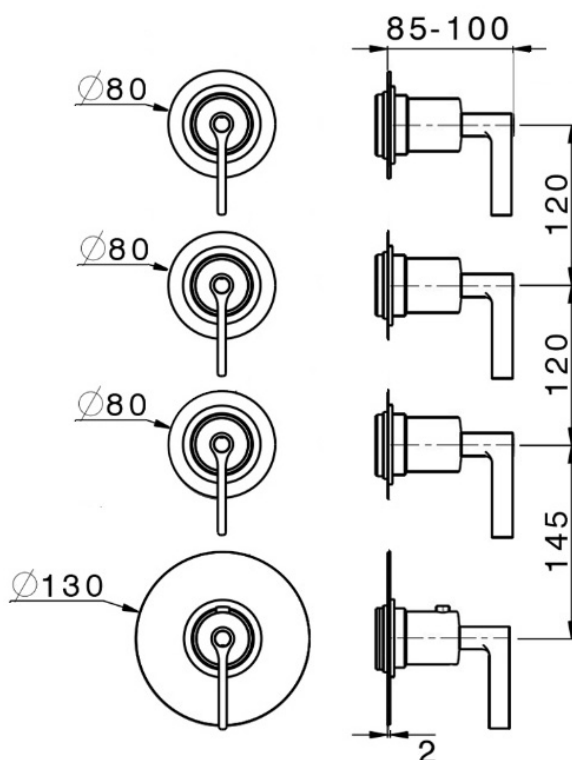


Can be installed
either vertically
or horizontally

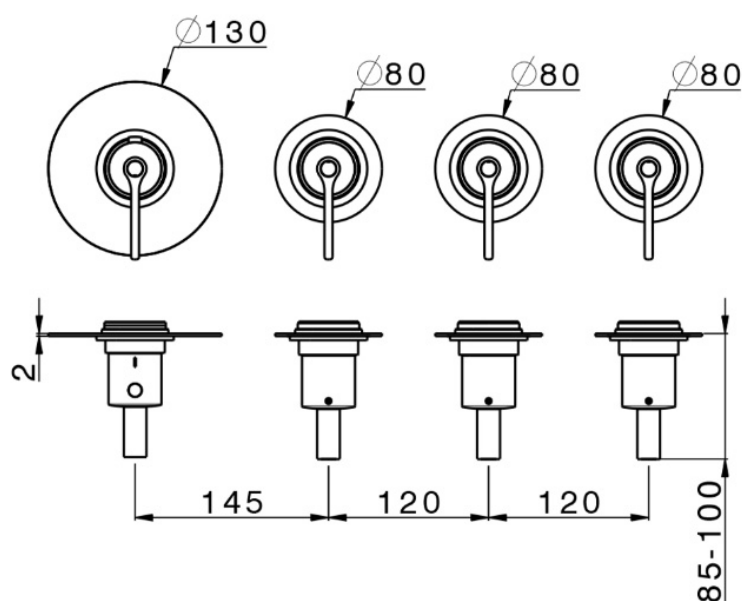


CIFIAL®

www.cifial.co.uk
sales@cifial.co.uk

dimensions mm

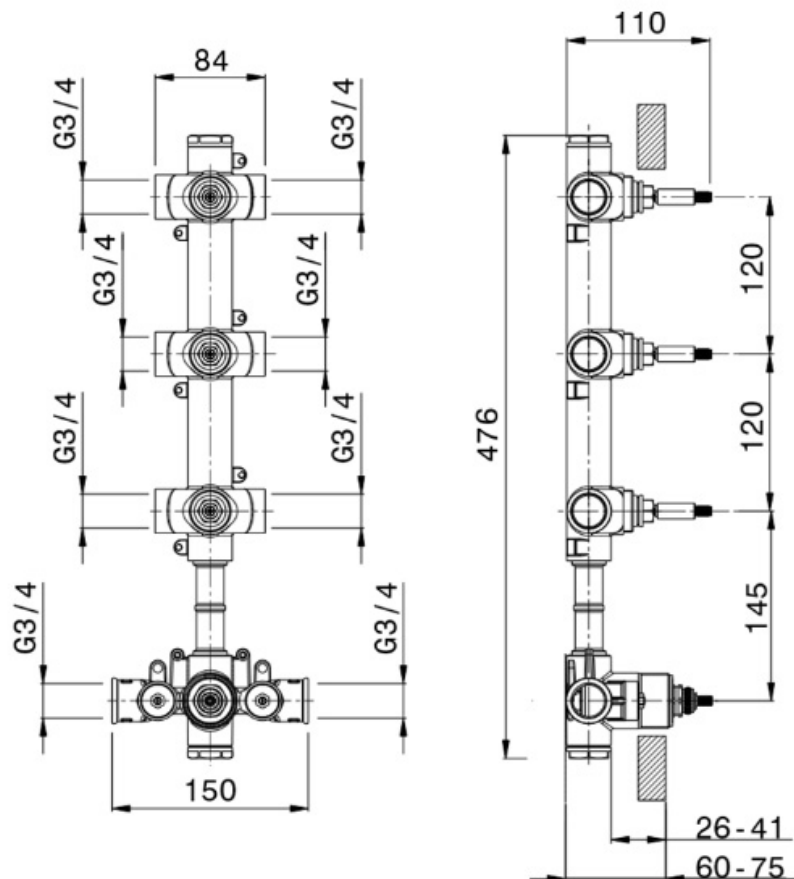


Can be installed
either vertically
or horizontally

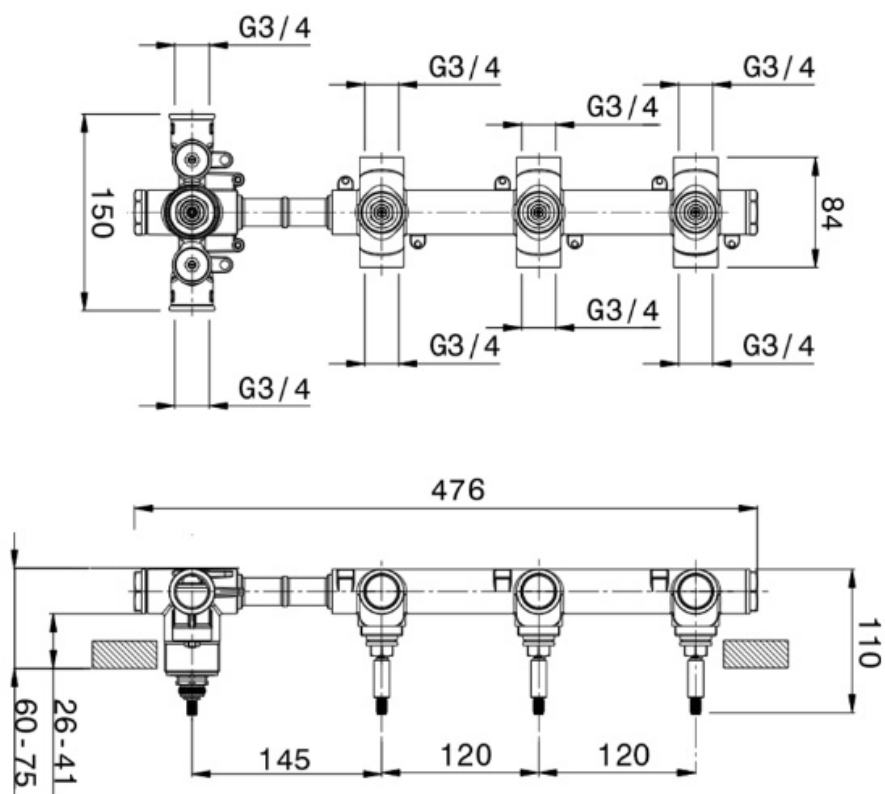

CIFIAL®



www.cifial.co.uk
sales@cifial.co.uk

dimensions mm

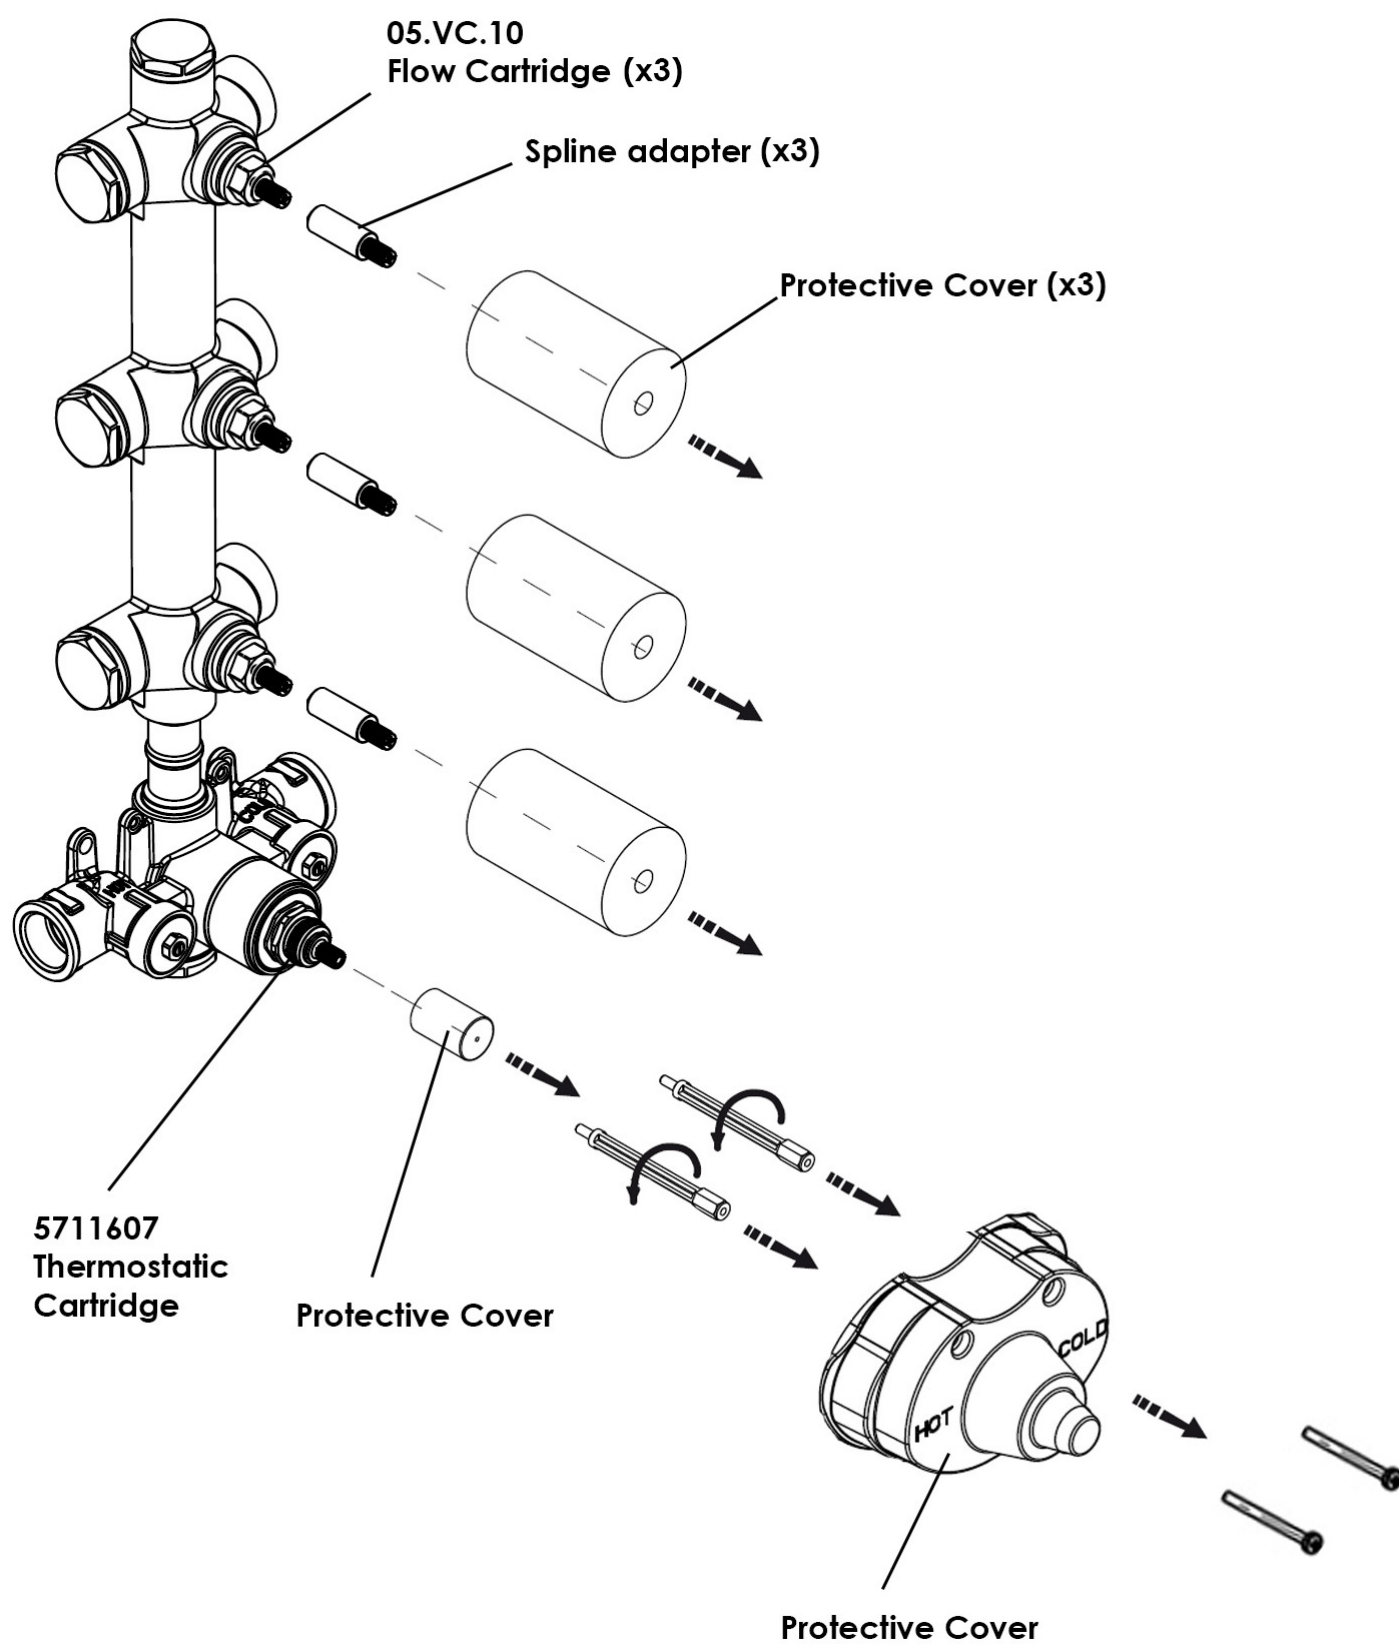
**CIFIAL®**

www.cifial.co.uk
sales@cifial.co.uk

Included

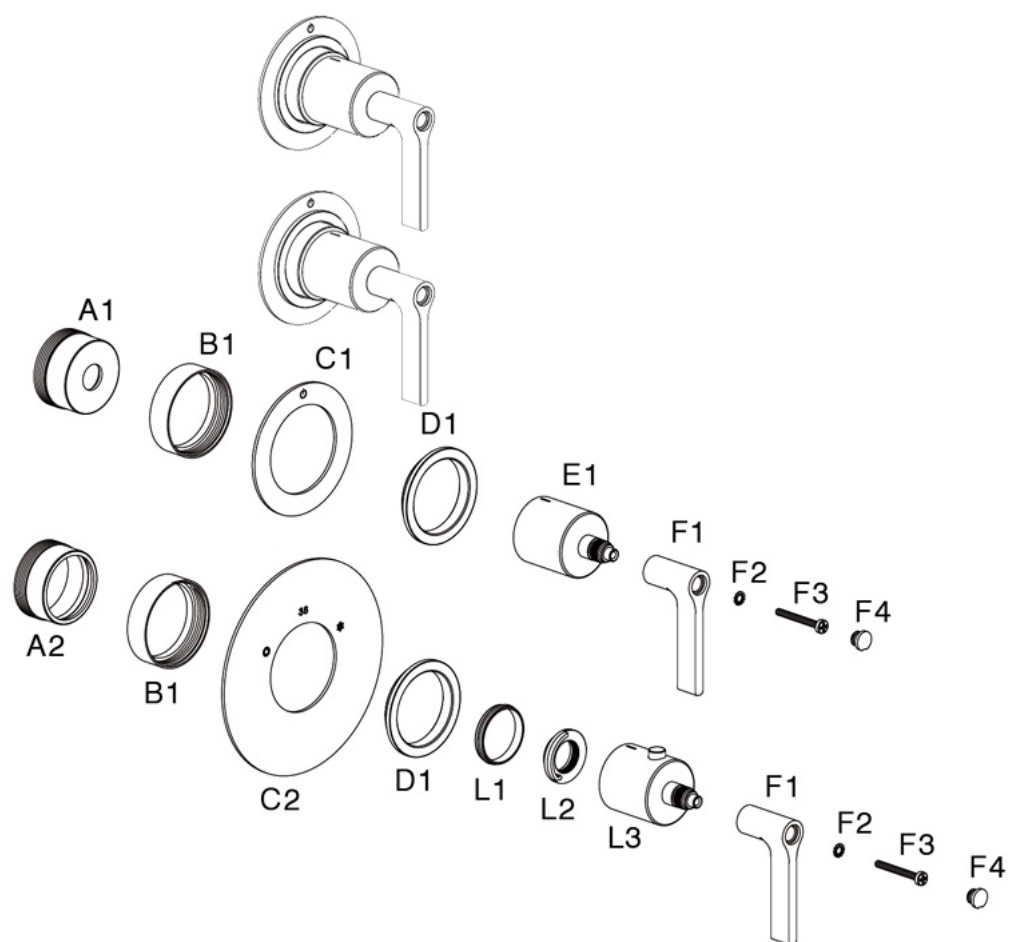

LEVER OPTION A

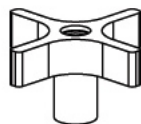

LEVER OPTION B




LEVER OPTION C


FOR LEVER C



D5

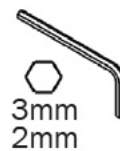
3mm
2mm**CIFIAL®**

www.cifial.co.uk
sales@cifial.co.uk

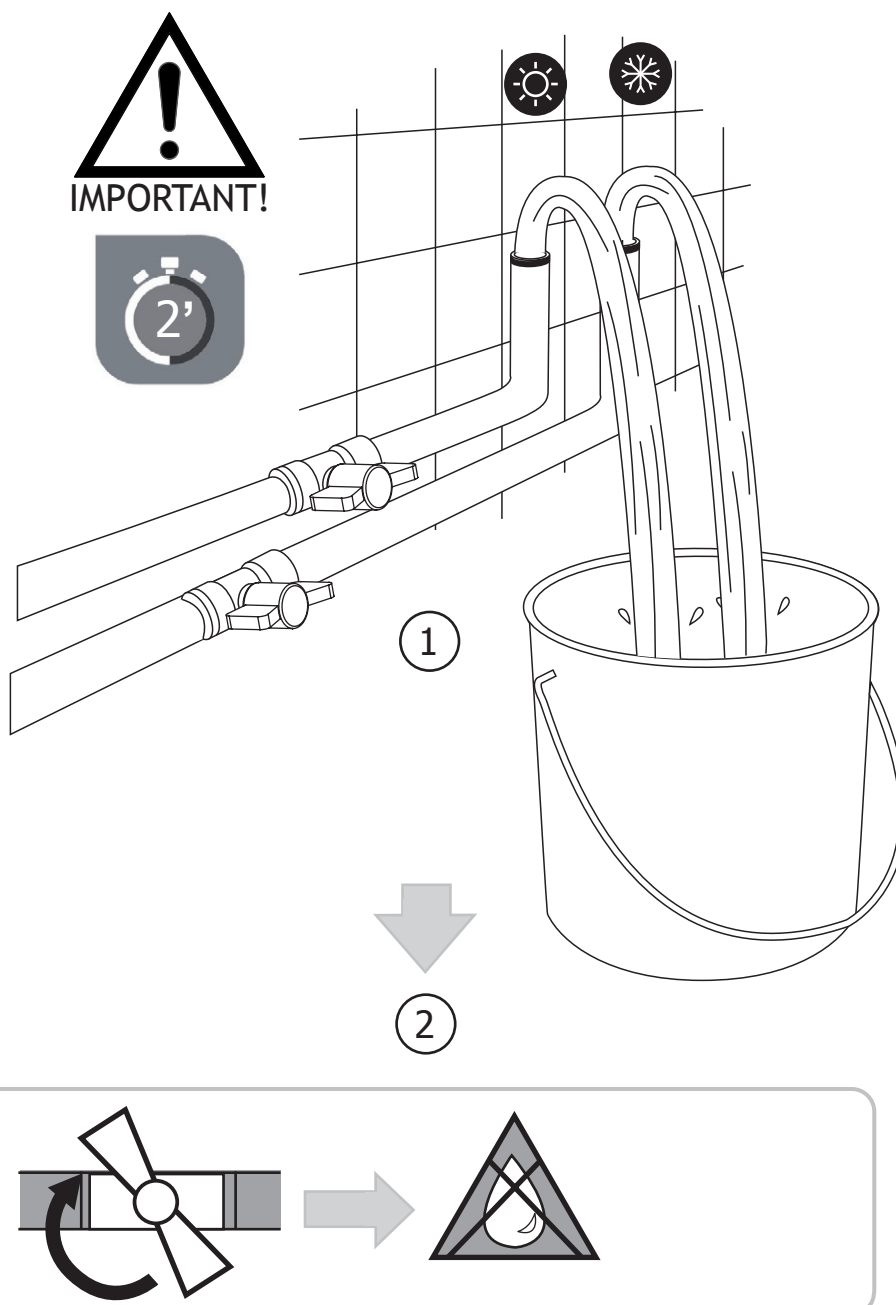
**CIFIAL®**

www.cifial.co.uk
sales@cifial.co.uk


Option A

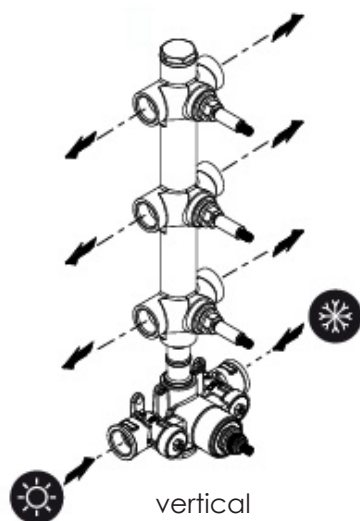


horizontal

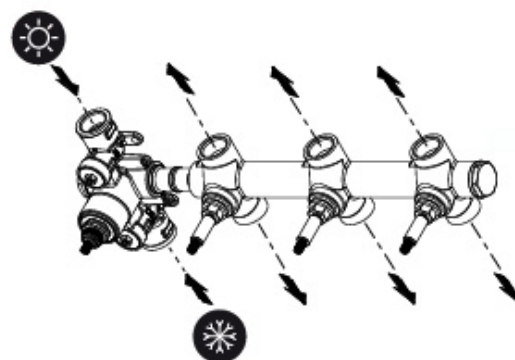


Option B

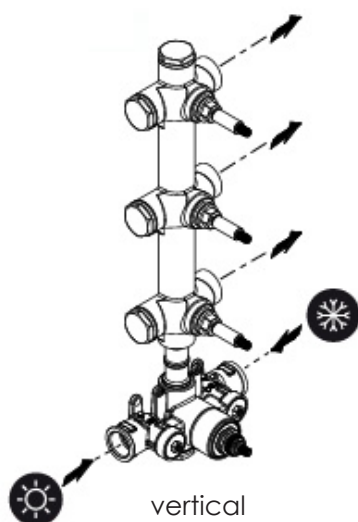


horizontal

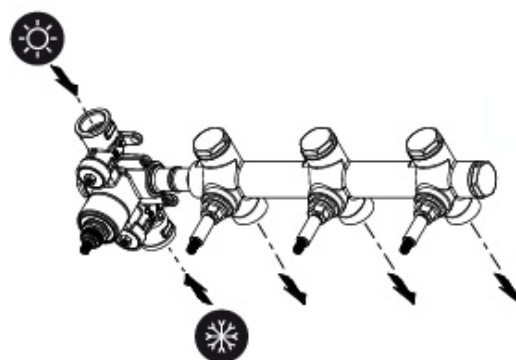

Option C

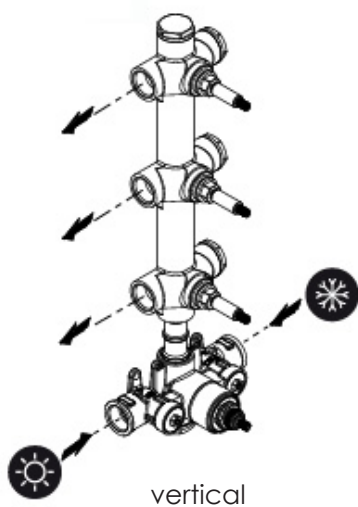


horizontal

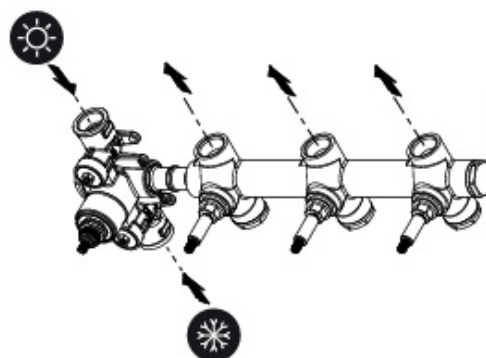




CIFIAL[®]

www.cifial.co.uk
sales@cifial.co.uk

Installation depth adjustment

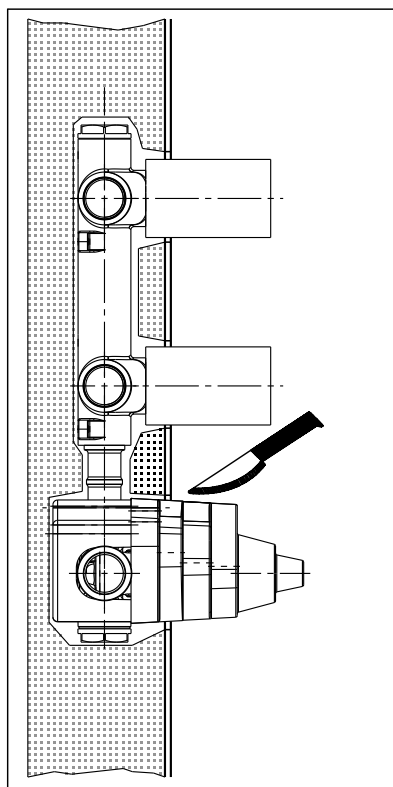

IMPORTANT! Please check for correct depth

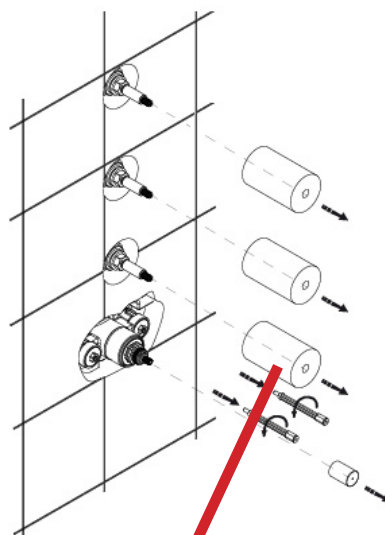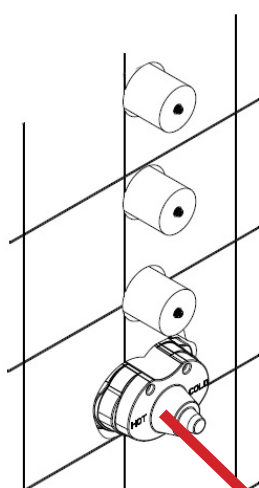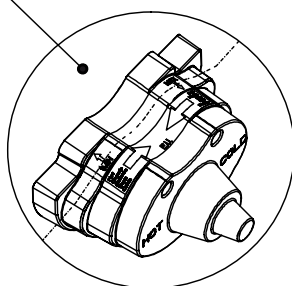


IMPORTANT:

REMOVE PROTECTIVE COVERS BEFORE TILING.

The Thermostatic Trim Ring (C2) is 130mm diameter
The Trim Ring (C1) is 80mm diameter


CIFIAL®

www.cifial.co.uk
sales@cifial.co.uk

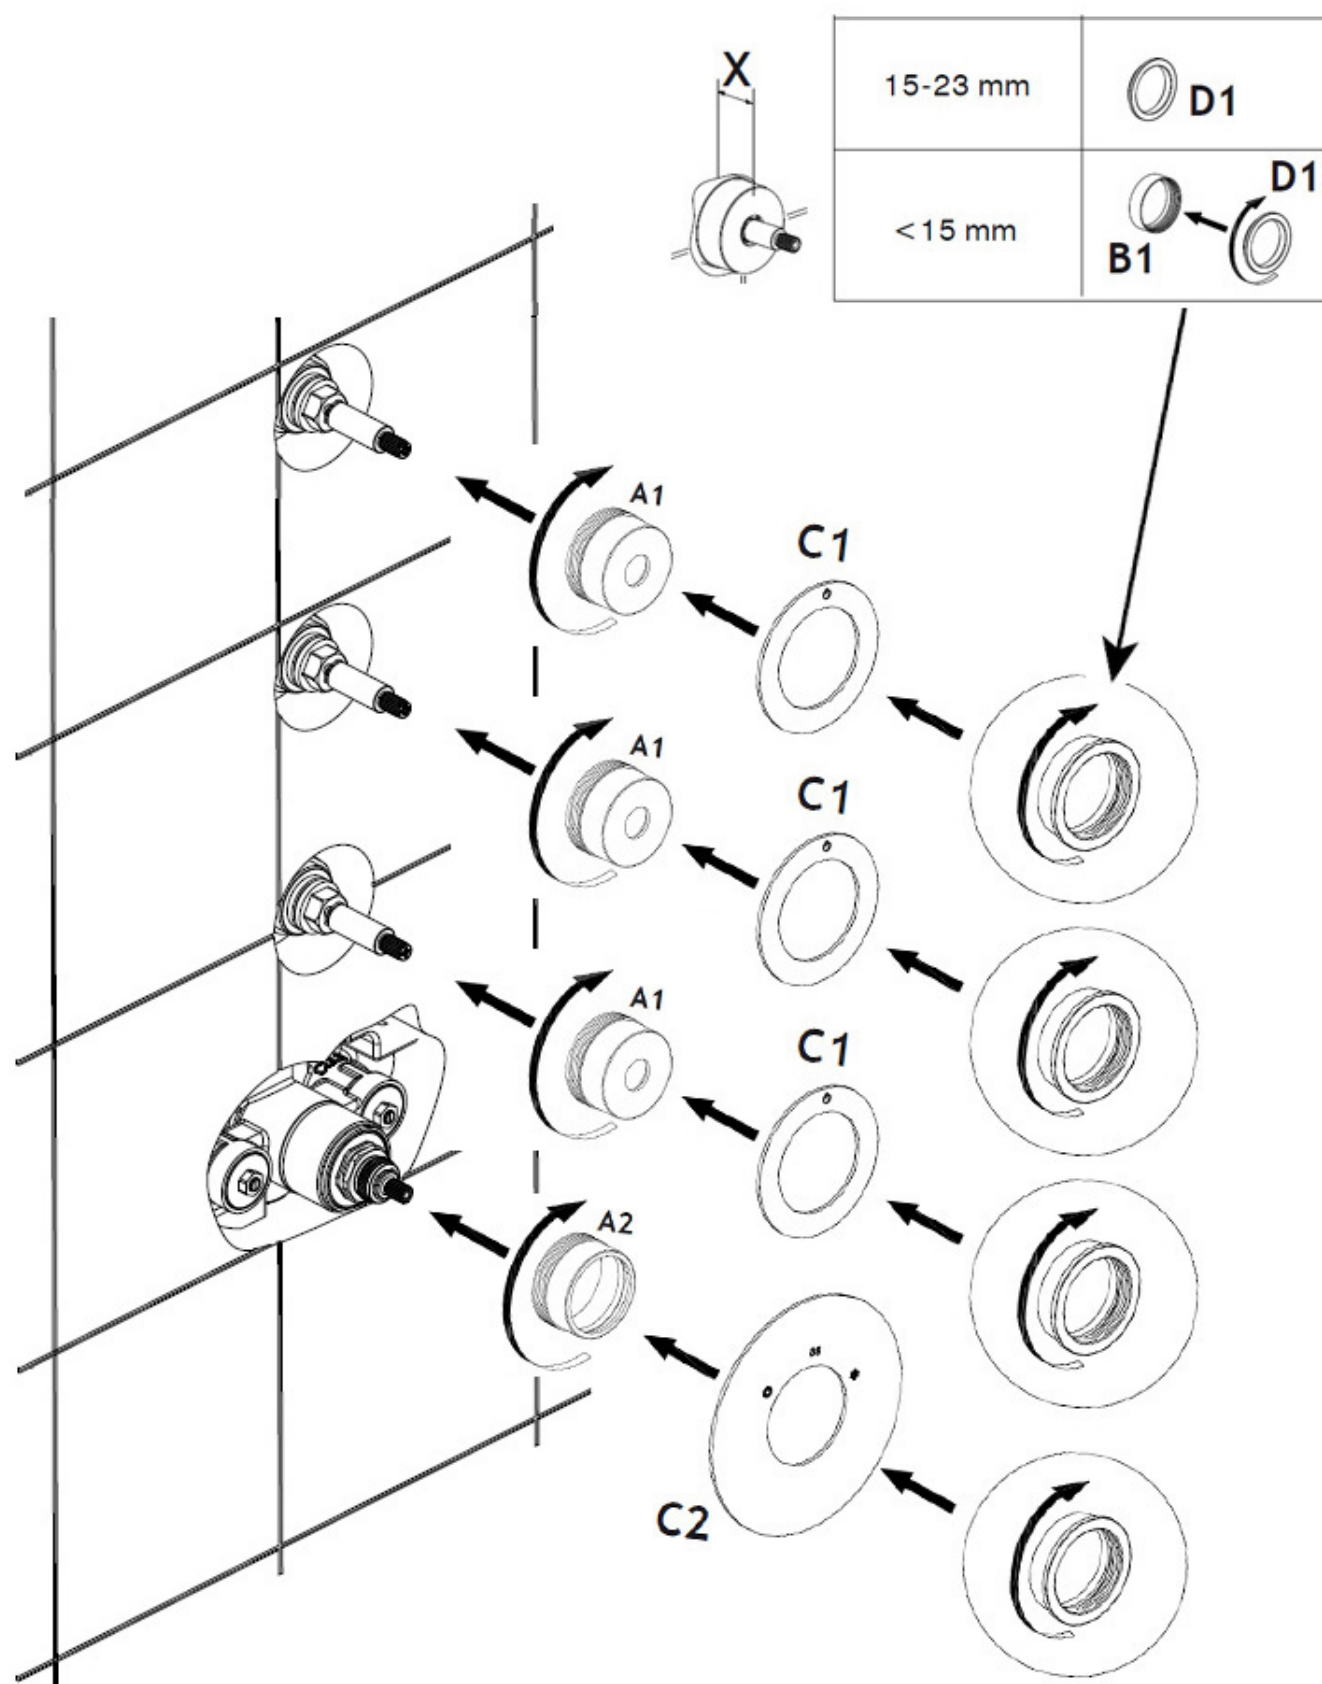

CIFIAL®

www.cifial.co.uk
sales@cifial.co.uk

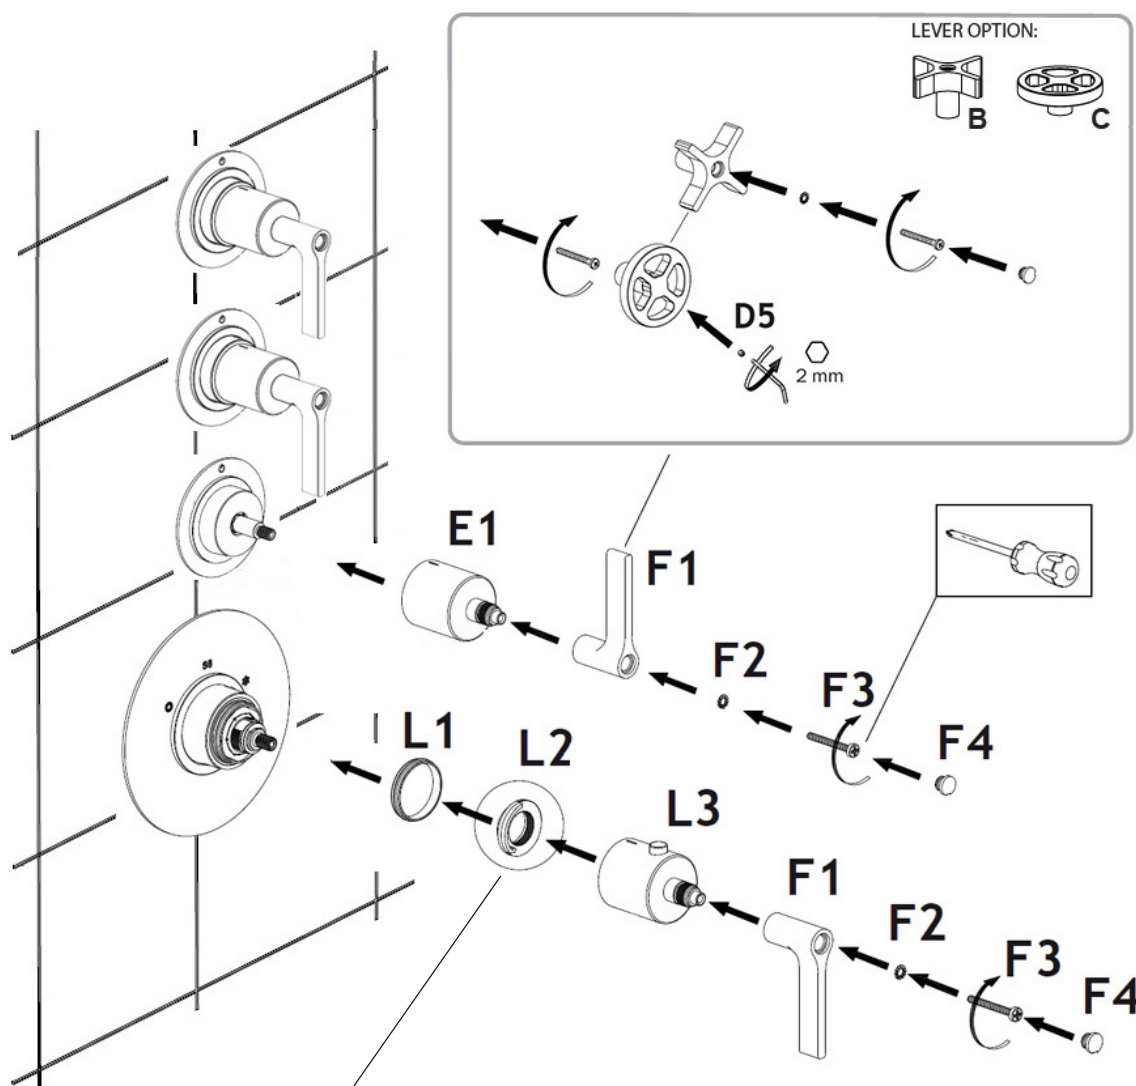

Prior to use - Setting the temperature

1. With all flow controls in the off position, remove the thermostatic valve handle and the temperature limit ring.
2. Put back on the thermostatic valve handle and turn clockwise until the cartridge "clicks". This is now set at fully cold.
3. Turn on one of the flow controls and turn the thermostatic valve handle anti-clockwise until the desired temperature is reached, ie 38°C. Use a thermometer to check if the temperature is correct (Fig. A)
4. Turn off the flow control, remove the thermostatic valve handle and replace the temperature limit ring with the red dot in the 12 o'clock position, ie corresponding with the 38°C on the etched plate (Fig. B).
5. Replace the thermostatic valve handle with the temperature override button position just prior to the 38°C (Fig. C)
6. Your thermostatic valve is now ready for use.

IMPORTANT: it is recommended that on a regular basis you rotate the thermostatic control handle between the maximum and minimum temperature limits by pressing the override button and with the water running. This way you prevent limestone incrustation that could build up and block the thermostatic cartridge.

Fig. A

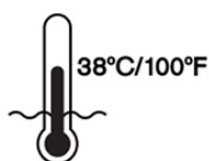


Fig. B
Red mark aligned with the mark 38°C.

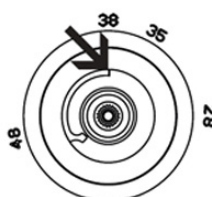


Fig. C
Temperature override button



CIFIAL®

www.cifial.co.uk
sales@cifial.co.uk